




13. The starter circuit plunger is not removed from cable.

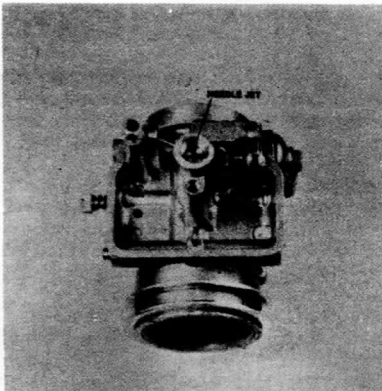


16. The needle jet is visible when main jet holder is removed.

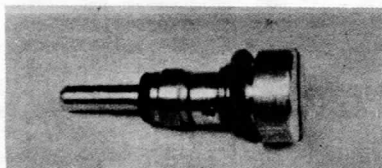


19. The accelerator pump nozzle should be inspected.

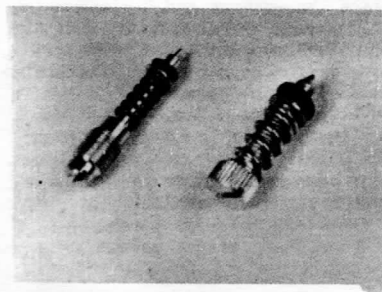


22. Each idle screw uses a spring washer, and O-ring for sealing.

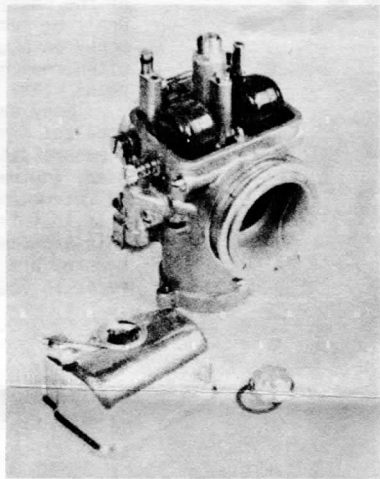


14. Removing the bowl reveals the floats.

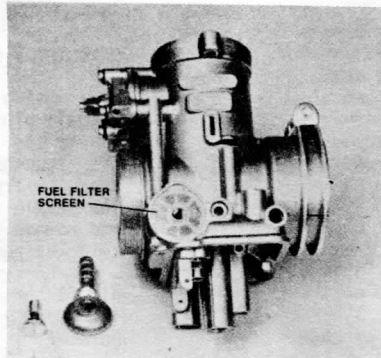


17. There is a filter screen under the inlet fitting.

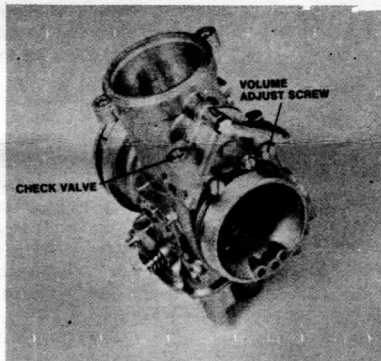


20. Check the check valve, but don't adjust the volume adjust screw.

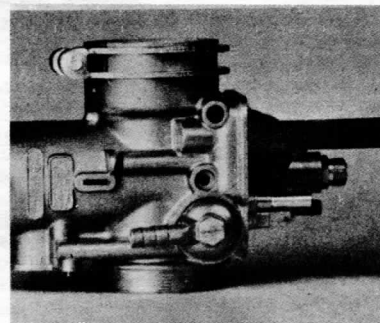


23. Proper float level is 17.5-18.5 mm.

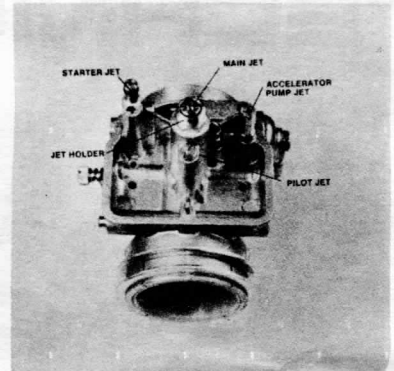

15. Dellorto carbs have more jets than most others.

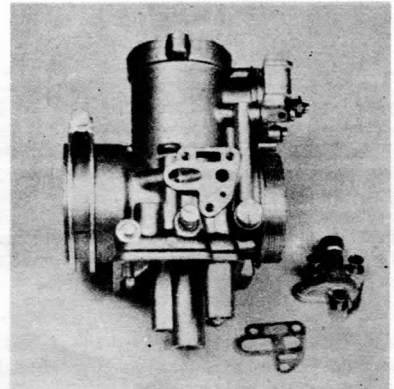

18. The starting circuit housing can be removed.

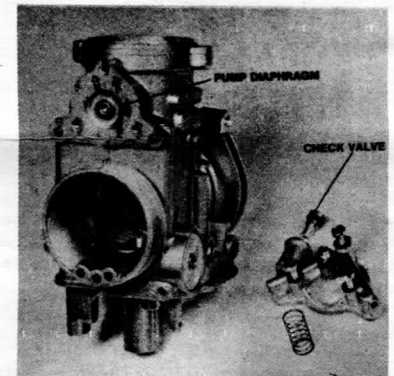

21. The accelerator pump diaphragm should be free from defects.



24. The slide is installed prior to the jet needle.